



----- Field Wiring

Instructions

Bring the 3 phase supply circuit with "short circuit protection" from your panel or disconnect to the top 3 terminals of the starter.

Then bring the 3 phase motor leads from the bottom of the starter to the motor. These should be housed in either rigid conduit or seal tight to maintain the "dust tight" rating.

The overload dial is preset to the motor size and onsite voltage, so there is no adjustment needed.

Brew Mill Starter Wiring Example